


- When terminating Adventum cable with pre-polished (mechanically spliced) field installable connectors, the fibers may move during the connector crimping process. To alleviate this possibility, apply a small amount of adhesive at the point where the fibers exit the cable buffer tube.

Follow the manufacturer's recommendations for:

- Cable Access
 - Cleaning
 - Cleaving
 - Break-out or fan-out kits
- Follow the manufacturer's instruction for inserting fibers through the break out kit. Just before closing the assembly apply a few drops of adhesive (Loctite[®] 401 or equivalent) at the end of the buffer tube, as illustrated below:

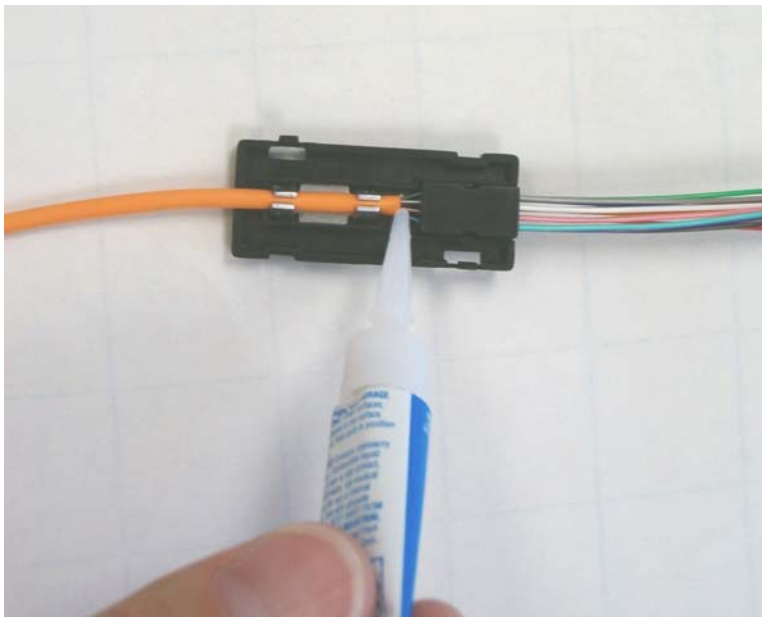

- Follow the manufacturer's instructions to complete the break-out kit installation
- Terminate the fibers with the pre-polished field installable connectors
- Inspect the terminated cable assembly
- Test the cable assembly link loss
- Keep all connectors, couplings and ports clean